

Settings with a local control (1W transmitter)

The end limits of the motor are set

Setting of the running time and programming a transmitter

1 Wiring

1	Blue	Neutral
2	Black	Phase
3	-	-
⊕	Yellow/green	Earth

1	Blue	Neutral
2	Black	Rotation 1
3	Brown	Rotation 2
⊕	Yellow/green	Earth

Power supply Motor side

2 Take control of the motor



Press at the same time until... ...short movement

3 Check the rotation direction



Press briefly



 
OK → step 5

or




not OK → step 4

4 Change the rotation direction, if required



Press until... ..short movement → OK
→ step 5

5 Activate the setting mode

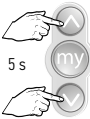

Press at the same ...short movement
time until...

6 Put the screen in the upper end limit



Press on the up
button until... ..the screen
is in the upper
end limit

7 Set the running time manually




Press at the same time until... ..the screen
goes down

Push directly on the "my" button
when the screen reach the lower
end limit until

...a short movement
of the screen

8 Programming the transmitter

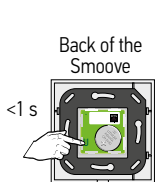

Briefly press the PROG button until...

Short movement → OK